

SETTING YOUR PIN CODE

Decide on the number for your code. Hold in the pin on the side of the knob while moving the numbers until your code is reached. Release the pin.

Check it: Move the numbers to lock and then key in your pin. If the door opens your pin is set correctly.

TROUBLESHOOTING

Lock opening issue

Occasionally the lock will not open when you put in your code. This can happen if in error the pin is pressed while moving the numbers. (This sets a new code).

To rectify – open the lock with your key and then move each set of numbers in turn until they lock. Press in the pin and move the numbers back to your code. Keeping the pin pressed close the lock and release the pin. The box will then open on your chosen code.